AIRTX POWER SUPPLIES with LIGHTED POWER INDICATOR (UL and CE Listed)




6320 Wiehe Road, Cincinnati, OH 45237 Phone: 1-800-307-7475 / www.airtx.com

Model 50000	(115V)	7500V Outlets	.3A	Model 50002	(115V)	6000V Outlets	.25A
	ENGLISH FILMENERS ELECTROPY	(4)	Input current			(2)	Input current
Model 50000-1	(230V)	7500V Outlets	.15A	Model 50002-1	(230V)	6000V Outlets	.12A
	2	(4)	Input current		1023 62	(2)	Input current

Output current max 5MR for all models

While Power Supply is unplugged, attach the ground lead ring terminal to ground terminal on Power Supply. Remove one of the two red caps on the end of the Power Supply. Insert power lead into connector and screw in locking nut.

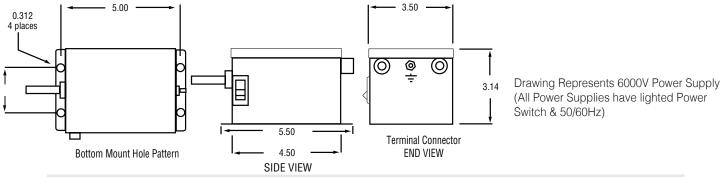

WARNING

DO NOT REMOVE LID WITHOUT FIRST UNPLUGGING THE POWER CABLE FROM THE ELECTRICAL WALL SOCKET!

REMEMBER TO TURN UNIT OFF WHEN NOT IN USE!

01/2016

AIRTX POWER SUPPLIES with LIGHTED POWER INDICATOR (UL and CE Listed)



.25A Input current

.12A


Input current

6320 Wiehe Road, Cincinnati, OH 45237 Phone: 1-800-307-7475 / www.airtx.com

Model 50000	(115V)	7500V Outlets (4)	.3A Input current		Model 50002	(115V)	6000V Outlets (2)
Model 50000-1	(230V)	7500V Outlets (4)	.15A Input current		Model 50002-1	(230V)	6000V Outlets (2)

Output current max 5MR for all models

While Power Supply is unplugged, attach the ground lead ring terminal to ground terminal on Power Supply. Remove one of the two red caps on the end of the Power Supply. Insert power lead into connector and screw in locking nut.

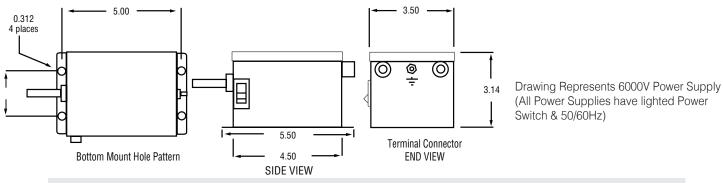

WARNING

DO NOT REMOVE LID WITHOUT FIRST UNPLUGGING THE POWER CABLE FROM THE ELECTRICAL WALL SOCKET!

REMEMBER TO TURN UNIT OFF WHEN NOT IN USE!